

Fig-1

Assembly

The LMC line of tables comes fully assembled and requires only leveling after placement.

Caution:

The pads on the levelers are designed to provide non-slip contact with the floor, sliding or dragging the table across the floor can twist the leg sections.

Leveling Table Feet

After the table has been moved to its final location, it should be leveled. Use a 1/2" opened end wrench to locate and adjust the height of the four levelers. This adjustment is designed to compensate for uneven floors and level the base frame left to right and front to back. (See *fig-2*)


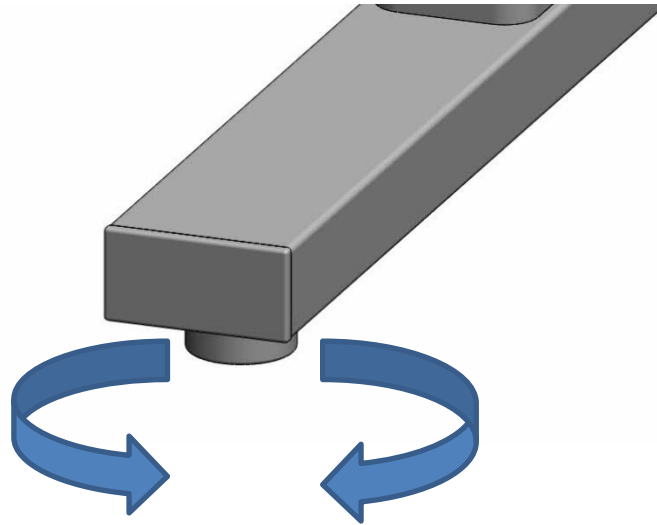


Fig-2

Note: Models with casters do not require leveling.

Table Height Adjustment

After the table has been placed and leveled it may now be set to desired height. To adjust the height of the work surface, it is recommended that three people are used. Two people to lift the surface to desired height while the third operates the locking pins.

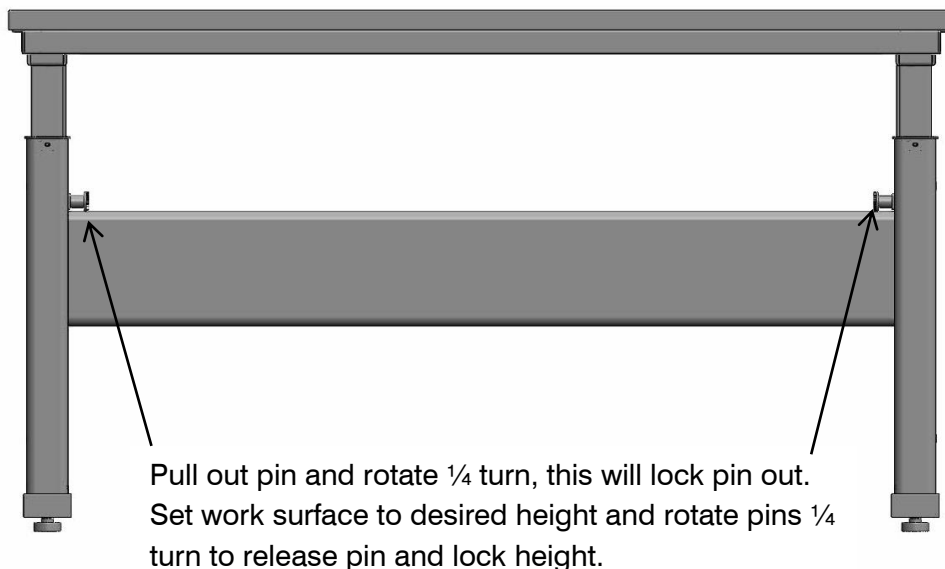

Caution: Never release pins without the work surface being supported.