



Assembly

Power Manifolds are shipped preassembled and is ready for installation out of the box. It is recommended that the Power Manifold be inspected for any damage before installation. These instructions are true for all PM-Series power manifolds in all their different configurations and various lengths to fit the width of workstation upright spacing.

