

Fig-1

Assembly

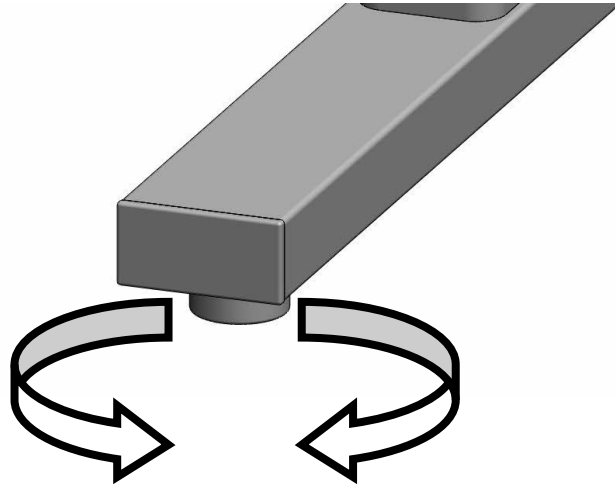
The LPC line of tables comes fully assembled and requires only a power supply and leveling after placement.

Caution:

The pads on the levelers are designed to provide non-slip contact with the floor, sliding or dragging the table across the floor can twist the leg sections.

Leveling Table Feet

After the table has been moved in to its final location, it should be leveled. Using a ½” opened end wrench to locate and adjust the height of the four levelers. This adjustment is designed to compensate for uneven floors and level the base frame left to right and front to back. (See *Fig-2*)

*Fig-2*

Note:
Models with casters do not require leveling.

Power Supply

Now that the table is in place and leveled, it can be plugged into the power supply. This table uses a standard plug intended for a 15 Amp service wall outlet.

Caution:
Never modify plug to be used other than intended from the factory.