


BH1420	Hardware List
1 – Articulating Arm	
1 – Bin Holder Assembly	
1 – Spacer Tube	
2 – Spacer Washers	
1 – $\frac{5}{16}$ -18 x $3\frac{1}{2}$ " Hex Head Cap Screws	
2 – $\frac{5}{16}$ " Washers	
1 – $\frac{5}{16}$ -18 Hex Nut	

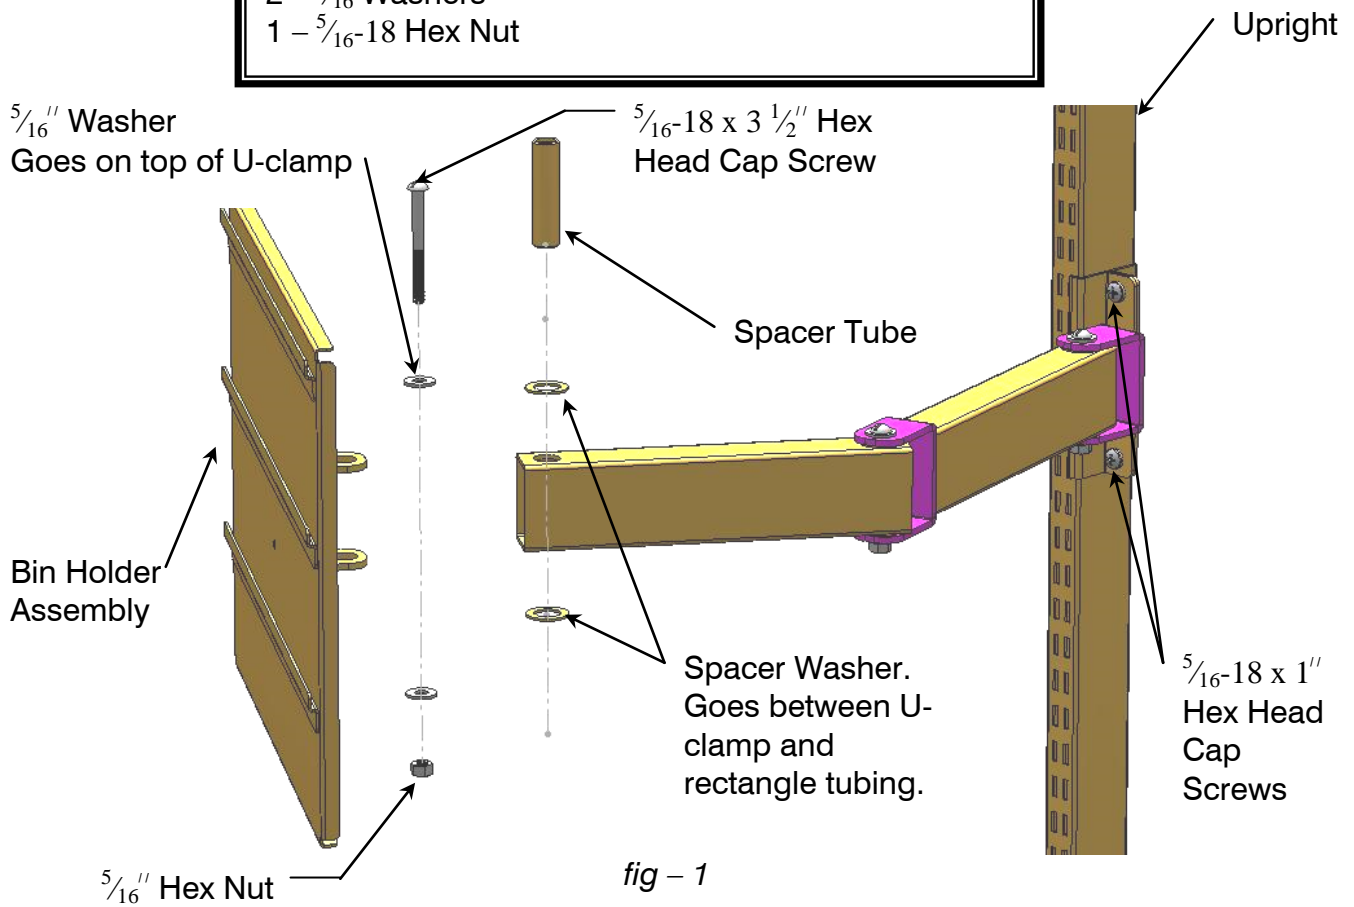

Select the slots on the upright that will provide the desired articulating arm positioning. Insert Both sides of the clamp assembly into the appropriate slots, making sure the U-shaped bracket is on the outside of the upright, and secure with the $\frac{5}{16}$ -18 x 1" Hex Head Cap Screws provided. The articulating arm can be mounted on the left or the right side of the upright, double check before proceeding that you have mounted it correctly. Mount the Bin Holder assembly on the end of the arm and secure it with the $\frac{5}{16}$ -18 x $3\frac{1}{2}$ " Hex Head Cap Screw, $\frac{5}{16}$ " Flat Washers, and $\frac{5}{16}$ " Hex Nut provided. (See fig - 1)