



fig-1


Assembly

The KA series hanging cabinets come fully assembled and only require placement on table. These instructions are for all KA series cabinets in their different configurations.

Installation

This Top-down View shows how the mounting tabs on the top-rear and front of cabinets attach to the mounting channels under the work surface of the table.

fig-2

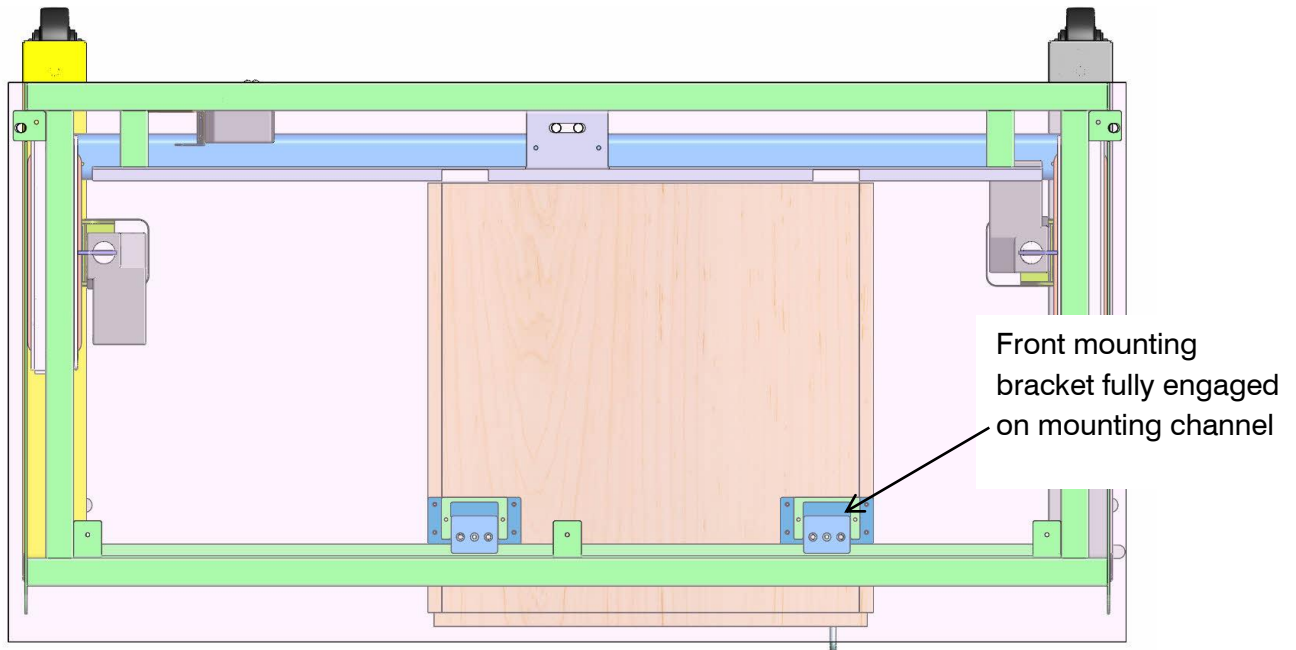

WARNING – Improper installation of cabinet can result in injury do to cabinet falling off work station.

To install, first make sure that front adjusting brackets are lose and free to move. Next lift rear of cabinet into place and position on channel lip, then lift the front of cabinet into place. Slide locking tabs as far forward as possible to insure proper engagement with front channel. Finally tighten locking screws. Your cabinet is now ready for service.

Cutaway to give a better view of mounting tabs engaged on mounting channels


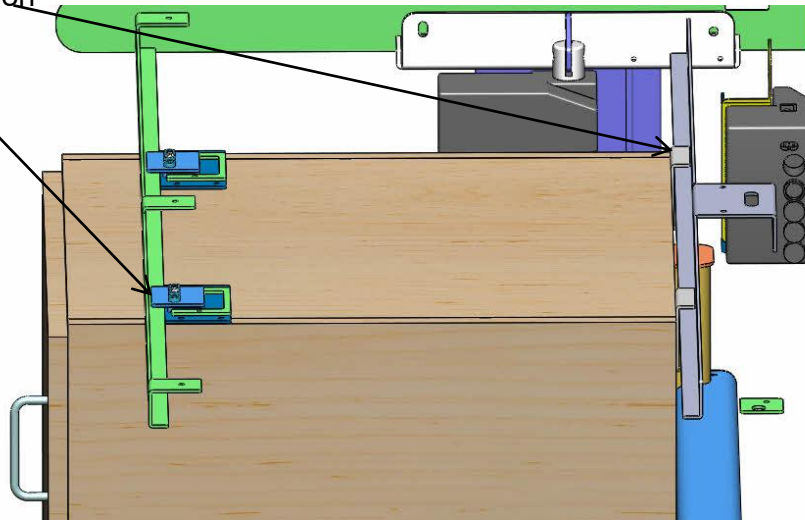


fig-3

Front bracket locking thumb-screw

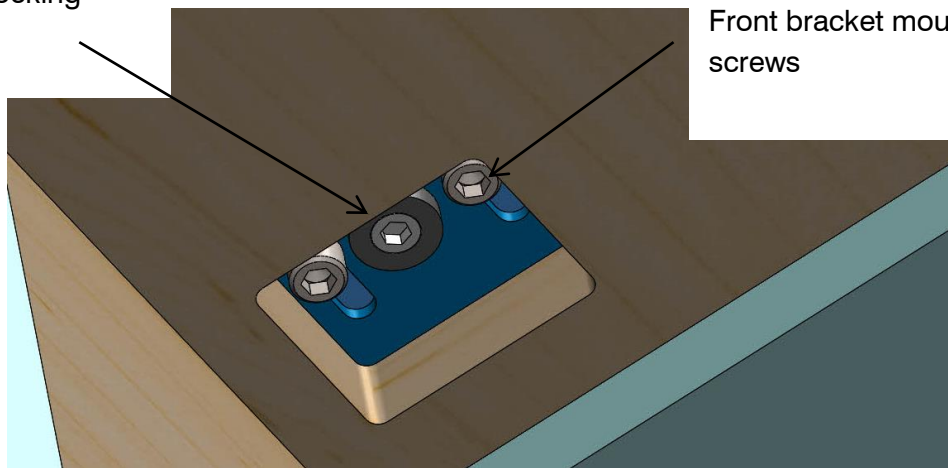

Front bracket mounting screws

fig-4

Bottom view of front mounting bracket with thumb-screw